



**P/N: ST0005U**



## **Introduction:**

Thermaltake BlacX eSATA & USB Docking Station easily connects all 2.5" or 3.5" SATA hard drives, allowing PC or MAC system to instant access and store data.

## **Features:**

 
- Supports all 2.5" & 3.5" SATA HDDs
- Hot-Swap Capability for Rapid Multi HDDs Access & Exchange
- Supports USB 2.0 Transfer speed up to 480Mbps
- Supports eSATA I/II Transfer speed up to 3Gbps
- Windows & Mac OS Compatible
- Compact Docking Station Design maximizes Heat Dissipation & Exhaust
- Patented Design: HDD Ejection Mechanism
- Windows Vista Ready!

## **Specification:**

- Model#: ST0005U
- Interface: SATA to eSATA / USB 2.0
- USB 2.0 Transfer Rate: up to 480 Mbps (Max)
- eSATA Transfer Rate: up to 3 Gbps (Max)
- SATA Compatible: SATA I & II
- HDD Compatible: All 2.5" or 3.5" SATA
- OS Compatible:  
Windows Vista/XP/2003/2000/NT/98/95  
Mac 10.3 and later
- Material: ABS Plastic
- Power: 12V / 2A
- Dimension: (L x W x H)  
5.12"x3.55"x2.56"  
130 x 90 x 65 mm


# Hardware installation

## 1 TOP

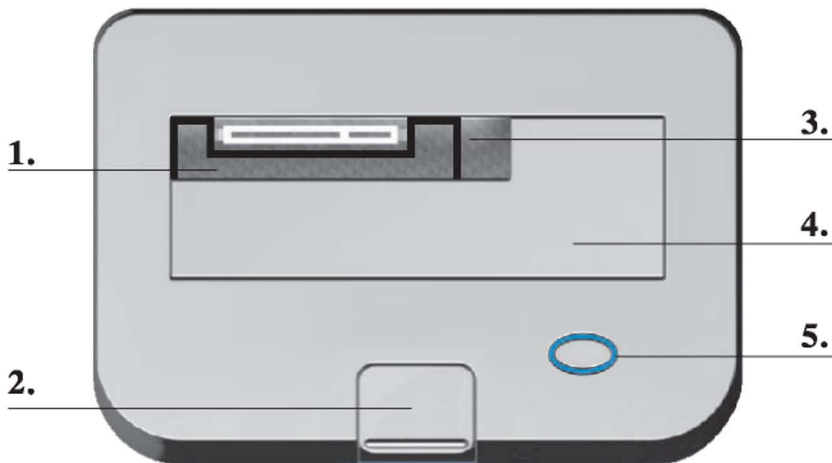

1. Push button to release HDD from SATA connector
2. Button
3. For 2.5" HDD
4. For 3.5" HDD
5. Power and Access LED

## 2 BACK

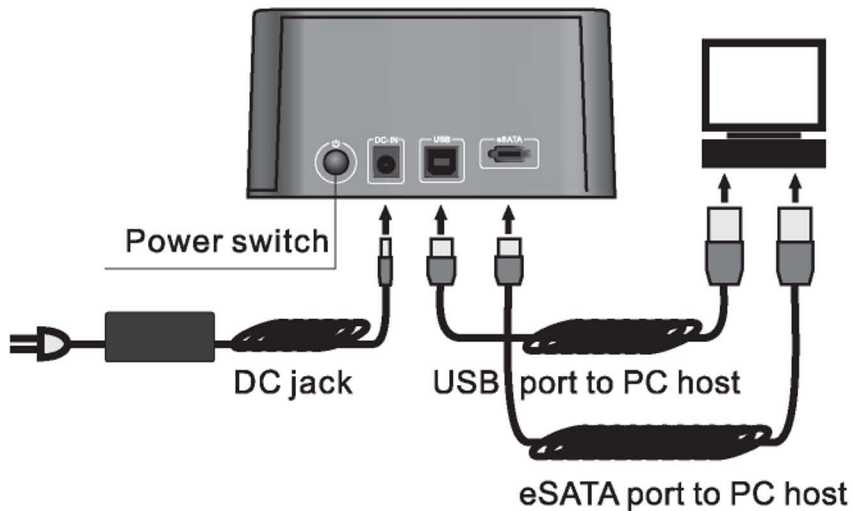 

## 2 Disk Installation




Install 2.5" HDD



Install 3.5" HDD

 Hard Drive not included\*

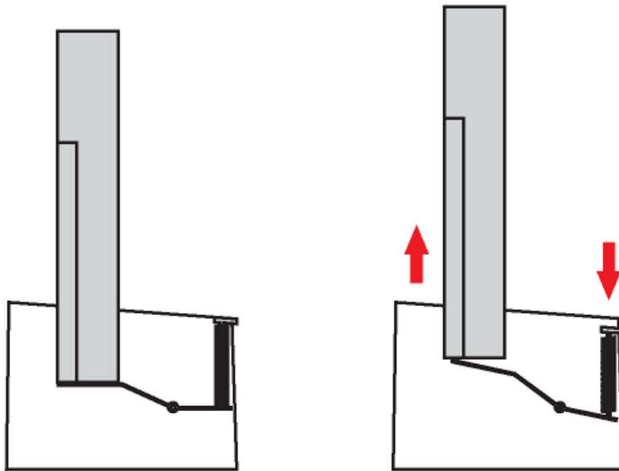

Patent design for HDD depart from docking unit

## **Note:**

All New / Raw hard drive(s) should follow hard drive / system manufacturer guideline or visit Thermaltake FAQ Site to partition, format and any necessary steps prior initial usage.

## **Quick Installation**

1. Connect eSATA / USB cable to the back of HDD Docking Station and Computer's eSATA / USB Port.
2. Connect the power cable to the back of HDD Docking Station and power outlet.
3. Insert SATA Hard Drive (with connectors facing down) into HDD Docking Station firmly.
4. Turn on the power switch.
5. No driver is needed. OS should find and installed the HDD Docking Station automatically.
6. Wait until OS completes all installations before usage.
7. For all new/raw hard drive initial partition & format, please visit Thermaltake FAQ Site:  
[www.thermaltakeusa.com/support/FAQ/faq\\_index.asp](http://www.thermaltakeusa.com/support/FAQ/faq_index.asp)

For technical support request, please visit  
<http://www.thermaltakeusa.com/contact/TechSupport/techreq-form.htm>

Or, please call support Hot-Line at 1-800-988-1088.

## **Company Information**

Thermaltake Technology, USA  
Address: 525 Parriott Place, City of Industry, CA 91745  
TEL: +1-626-968-9189  
FAX: +1-626-968-7659  
E-MAIL: [info@thermaltakeusa.com](mailto:info@thermaltakeusa.com)

# **FCC and CE Radiation Norm**

## **FCC**

This equipment has been tested and found to comply with limits for Class B digital device pursuant to Part 15 of Federal Communications Commission (FCC) rules.

## **CE**

This equipment has been tested and found to comply with the limits of the European Council Directive on the approximation of the law of the member states relating to electromagnetic compatibility (89/336/EEC) according to EN 55022 Class B.

## **FCC and CE Compliance Statement**

These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected to

## **CAUTION!**

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.